


# AWCTool Manual


1. Power on the motherboard and connect to the computer via **USB**.
2. Open the AWCTool software and change the password.



3. Input the factory password. (Default Password: 608111)- Press ok

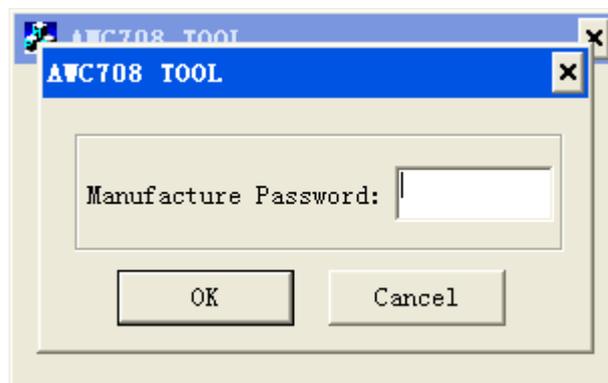


4. There are 3 Options:
  - Modify Manufacturer Password;
  - Time Synchronization;
  - Read User' Right;

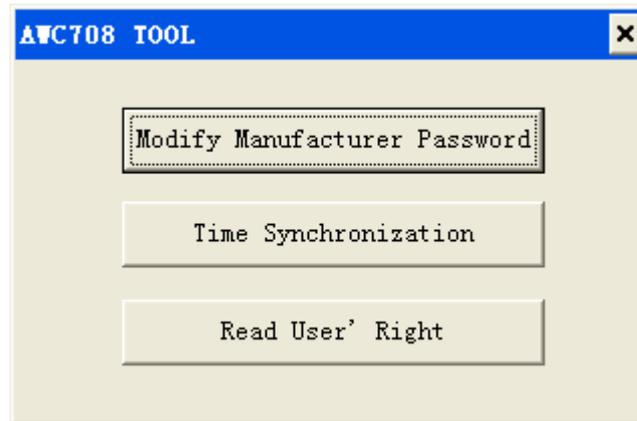

### MODIFY MANUFACTURER PASSWORD:

Click "Modify Manufacturer Password" Button: Make a modification of the manufacturer's password. Enter the new manufacturer password and click the Modify button to complete the modification of the manufacturer password.

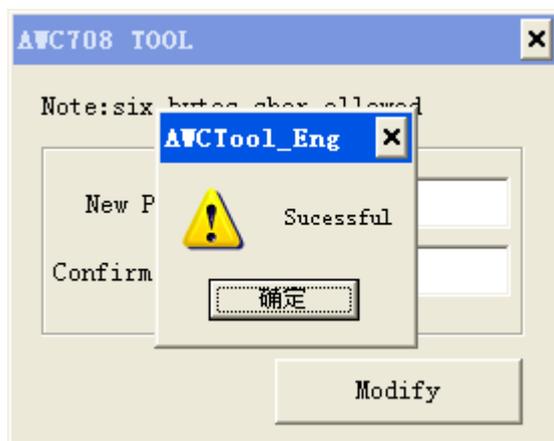

### TIME SYNCHRONIZATION:

Click "Time synchronization" Button: Change the motherboard system time to the current time of the computer.

### READ USER' RIGHT

Click "Read User' Right" Button: it will display the encryption of the board.

- 1) The unencrypted board will show permanent usage rights.
- 2) The encrypted board will show the expiration date